

To Replace.

1. Replacing the doors is a direct reversal of the removal procedure.

B.17 - SUN VISORS.

To Remove and Replace.

1. The sun visors can be removed after releasing the two screws which pass through their brackets. Note when replacing that the visors are 'handed'.

B.18 - FACIA PANEL.

To Remove.

1. Disconnect the battery.
2. Release the upper steering column clamp (see Section 'H').
3. Release the bonnet control handle from its bracket by freeing the securing nut.
4. Remove the speedometer drive cable together with the 'trip' control from the back of the instrument.
5. Remove the rear seat backrest (Section 'B.26') and the tunnel top (Section 'B.29').
6. Remove demister grilles from top of crash pad and face level ventilators (see Section 'P').
7. Release the nuts securing the side brackets which carry the door courtesy lamp switches.
8. Release the forward end of the transmission tunnel side valances by lifting up.
9. Remove the facia panel securing bolts (4 along top, 2 at centre bottom) and pull panel forwards. Release radio earth strap.
10. With the facia panel held at approximately 60° to the vertical, remove the heater controls at the heater unit (see Section 'P'). Mark the positions of all electrical cables and remove from their locations. Lift facia panel from its location. Further dismantling can be carried out as required with the panel on a felt-covered bench.

To Replace.

1. Replacement is a direct reversal of the removal procedure, except it is suggested that after replacing all electrical cables, the battery be re-connected and all electrical circuits checked. If satisfactory, disconnect battery and proceed with remainder of replacement.

B.19 - GLOVE BOX.

To Remove.

1. Remove the facia panel (Section 'B.18').
2. With the facia panel face down on a felt-covered bench, release the screws securing the sides of the glove box to the rear of the facia panel.

To Replace.

1. Reverse the removal procedure.