


# Alternator Models 15ACR, 16ACR, 17ACR & 18ACR


PART | SECTION

**A**

**5**

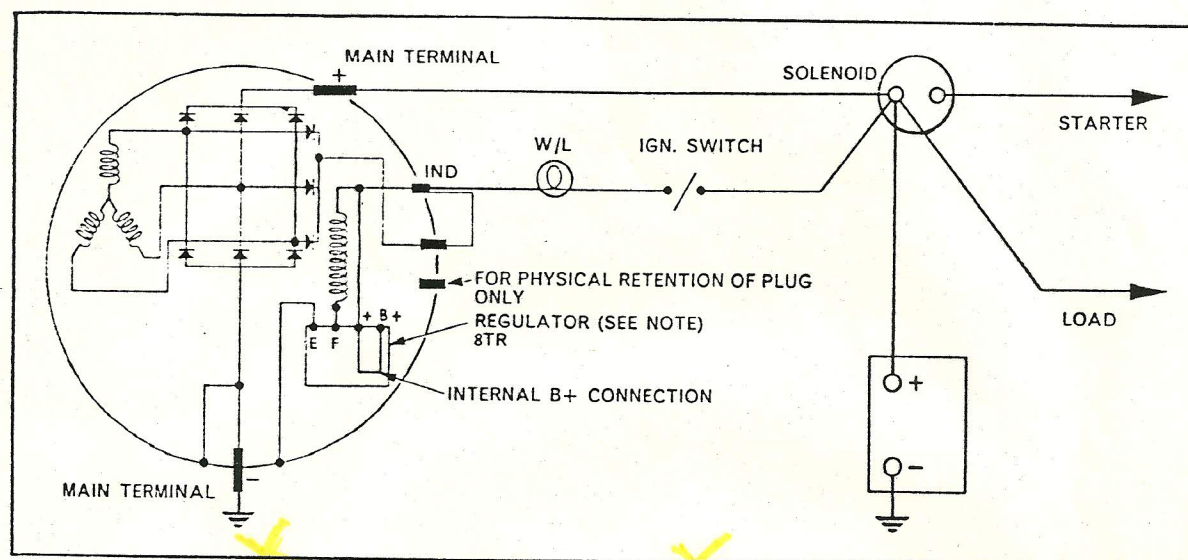

**Fig. 6** Machine-sensing system, 15ACR, 16ACR and 17ACR alternators (standard terminations Fig. 2)

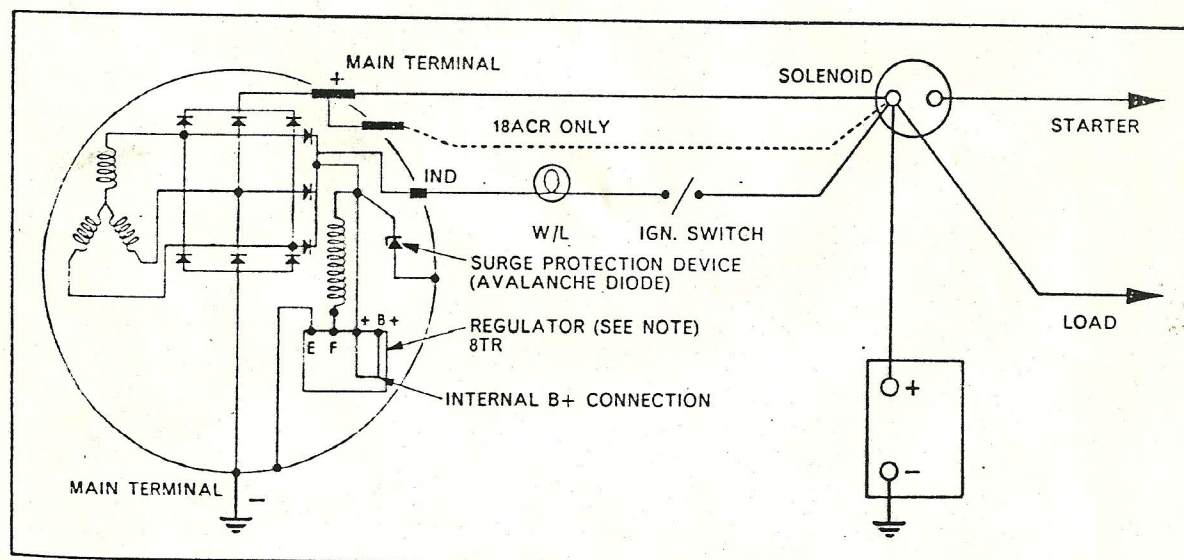

**Fig. 7** Machine-sensing system, 15ACR, 16ACR, 17ACR and 18ACR alternators (European terminations Fig. 3)

## Note:

- If a 3-lead model 11TR regulator is fitted, the 'B+' terminal and internal link will not apply.
- If a 2-lead model 8TRD regulator is fitted, the earth-connection will be via the regulator case.
- If a later production 2-lead model 14TR regulator is fitted, the 'F' connection will be via the regulator case (connected to the brush box via a metal connector link) and the 'B+' terminal and internal link will not apply.